

DIAGRAM 1:
Template assembled


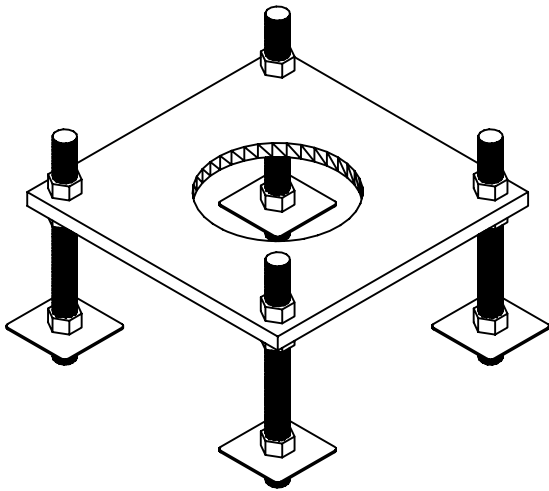


DIAGRAM 2:
Foundation cross section

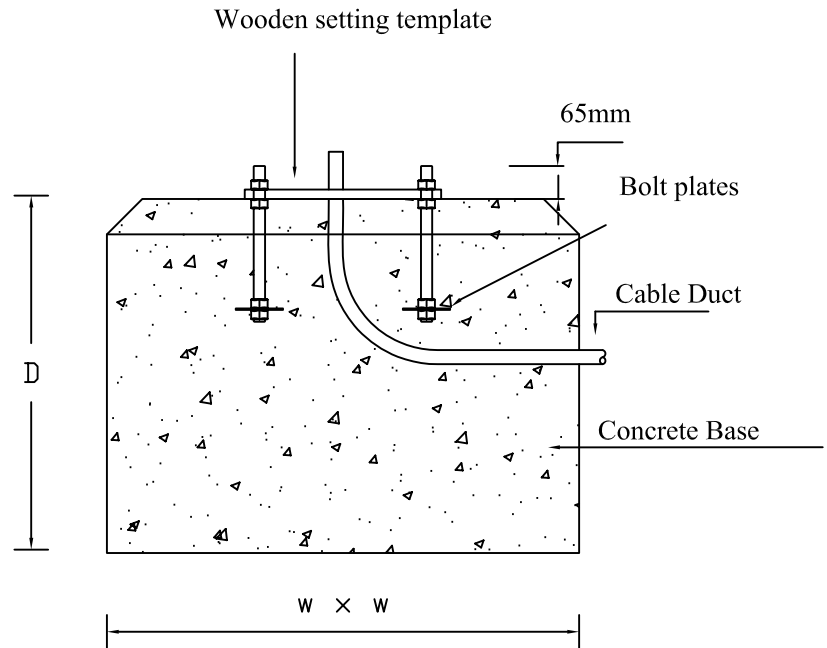

PRODUCT CODE: CCP FOUNDATION DETAILS

The below recommended foundation details are typical and some site conditions may require increased concrete base sizes. A minimum soil bearing of 75 n/m sq is assumed. We recommend pressures below the minimum are assessed by a structural engineer.

| Product Code | Height | Base Area (W x W) | Depth | Concrete Vol M ³ |
|--------------|--------|-------------------|-------|-----------------------------|
| CCP3 | 3 mtr | 1000 x 1000 | 500 | 0.5 |
| CCP4 | 4 mtr | 1000 x 1000 | 750 | 0.75 |
| CCP5 | 5 mtr | 1000 x 1000 | 750 | 0.75 |
| CCP6 | 6 mtr | 1000 x 1000 | 1000 | 1 |
| CCP7 | 7 mtr | 1200 x 1200 | 1000 | 1.44 |
| CCP8 | 8 mtr | 1300 x 1300 | 1000 | 1.69 |
| CCP9 | 9 mtr | 1400 x 1300 | 1000 | 1.96 |
| CCP10 | 10 mtr | 1500 x 1500 | 1000 | 2.25 |
| CCP11 | 11 mtr | 1700 x 1700 | 1200 | 3.46 |
| CCP12 | 12 mtr | 1750 x 1750 | 1200 | 3.67 |

1. Excavate hole as per recommended area and depth.
2. Assemble root base as shown in diagram 1 ensuring that it is level and that four studs protrude at 65mm above base of wooden setting template.
3. Ensure ducting is in place we recommend that a minimum of 150mm extrudes from ground level, if required this can be trimmed back once concrete is set.
4. Pour concrete ensuring that it is a mix of C35 to table 6 BS8110 and then tamp down well.
5. Push wooden template and bolts into concrete and level accordingly.
6. When fitting the column, remove wooden template and ensure that the concrete base is in complete contact with the underside of column and torque the nuts to 230-270 Nm (175 – 200 ft.lb)
7. When the column has been fitted, protect the studs with a suitable protective coating. Denzo tape or similar is recommended.
8. After re-instatement it is essential that a load bearing grout is used to fill the void between base plate and concrete, failure to do so may cause deflection in pole. It is recommended that the poles are grouted internally to ensure water tight.