

4 X Ø8mm HOLES ON A  
101.6 PCD  
STANDARD PAN & TILT FIXING

INTERNAL  
MULTI CORE CABLE  
PULLEY WHEEL

CARRIAGE CLAMPED INTO  
POSITION TO ACHIEVE  
MAXIMUM RIGIDITY

AS STANDARD  
CARRIAGE HAS BUILT IN  
FALL ARREST SYSTEM IN  
CASE OF CABLE FAILURE  
DUE TO VANDALISM

EXTRA

Ø273 CHS

6 - 15MTR

CAMERA ARM  
ROTATES TO  
SERVICEABLE HEIGHT

500 SQUARE

ANTI-TAMPER  
SWITCH

QUAD-LATCH  
ANTI-VANDAL DOOR

TREATED WOODEN  
B/BOARD





1400

LOWER VENTS

50mm Ø CCTV Cable duct

50mm Ø Mains supply duct

W X W

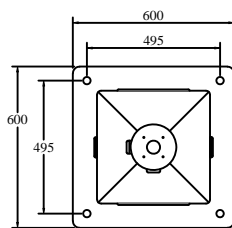

DOOR FITTED WITH HEAVY  
DUTY LOCK COVERS AND  
RECESSED S/S LOCKS

Grade C35 Concrete recommended

DIAGRAM 1:  
Template assembled


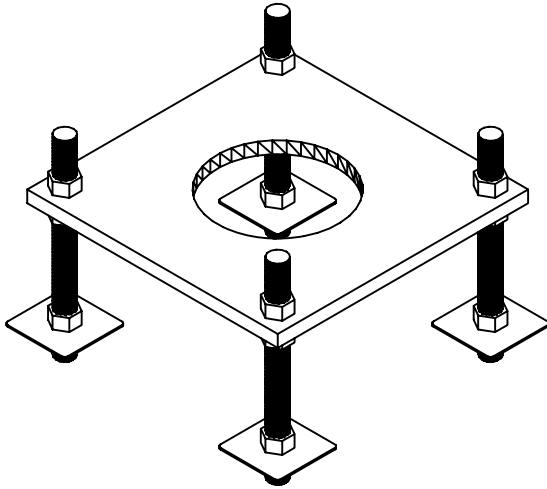


DIAGRAM 2:  
Foundation cross section

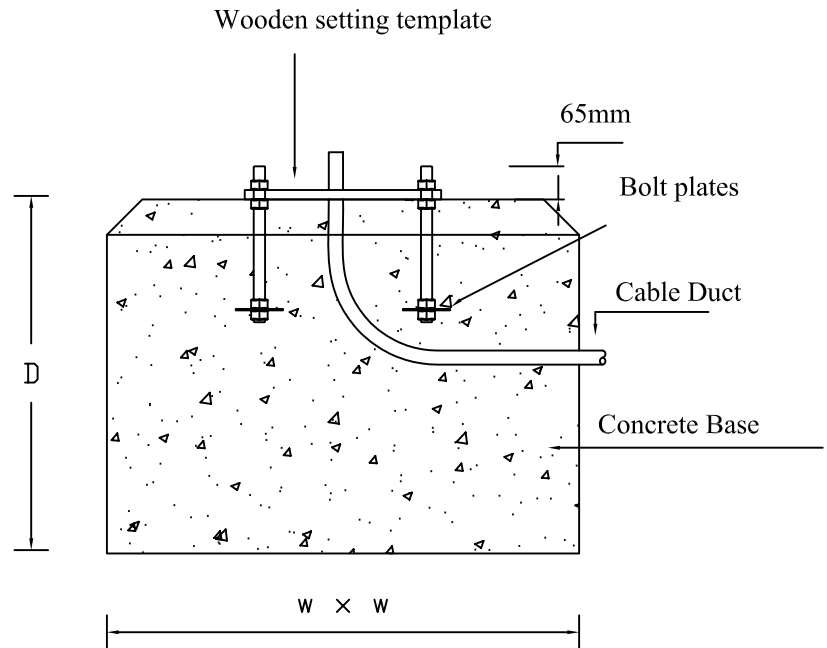

### PRODUCT CODE: DHP FOUNDATION DETAILS

The below recommended foundation details are typical and some site conditions may require increased concrete base sizes. A minimum soil bearing of 75 n/m sq is assumed. We recommend pressures below the minimum are assessed by a structural engineer.

Product Code	Height	Base Area (W x W)	Depth	Concrete Vol M <sup>3</sup>
DHP3	3 mtr	1000 x 1000	500	0.5
DHP4	4 mtr	1000 x 1000	500	0.5
DHP5	5 mtr	1000 x 1000	750	0.75
DHP6	6 mtr	1200 x 1200	1000	1
DHP7	7 mtr	1200 x 1200	1000	1.44
DHP8	8 mtr	1400 x 1400	1000	1.69
DHP9	9 mtr	1400 x 1400	1000	1.96
DHP10	10 mtr	1500 x 1500	1000	2.25
DHP11	11 mtr	1700 x 1700	1200	3.46
DHP12	12 mtr	1750 x 1750	1200	3.67
DHP13	13 mtr	1900 x 1900	1200	4.33
DHP14	14 mtr	1900 x 1900	1200	4.33
DHP15	15 mtr	2000 x 2000	1200	4.8

1. Excavate hole as per recommended area and depth.
2. Assemble root base as shown in diagram 1 ensuring that it is level and that four studs protrude at 65mm above base of wooden setting template.
3. Ensure ducting is in place we recommend that a minimum of 150mm extrudes from ground level, if required this can be trimmed back once concrete is set.
4. Pour concrete ensuring that it is a mix of C35 to table 6 BS8110 and then tamp down well.
5. Push wooden template and bolts into concrete and level accordingly.
6. When fitting the column, remove wooden template and ensure that the concrete base is in complete contact with the underside of column and torque the nuts to 230-270 Nm (175 – 200 ft.lb)
7. When the column has been fitted, protect the studs with a suitable protective coating. Denzo tape or similar is recommended.
8. After re-instatement it is essential that a load bearing grout is used to fill the void between base plate and concrete, failure to do so may cause deflection in pole. It is recommended that the poles are grouted internally to ensure water tight.